


Q-TECH Falscheider Str.9 D 32584 Löhne Tel. 0 57 32 / 89 17 20  
[www.q-tech.de](http://www.q-tech.de) e-mail: [info@q-tech.de](mailto:info@q-tech.de)

## Gebrauchsanleitung für Halltest Artikel Nr. 130.277, 130.077, 130.137

1. Zündung ausschalten
2. Hallgeber an der Steckverbindung trennen
3. Halltest in beide freien Stecker einstecken und Zündung einschalten
4. Motor in Drehrichtung drehen.  
Der Wechsel AN-AUS oder AUS-AN der roten Lampe zeigt den eingestellten statischen Zündzeitpunkt an, je nach Drehrichtung
5. Nach den Einstellarbeiten die Steckverbindung Hallgeber-Kabelbaum wiederherstellen.

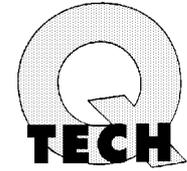

Q-TECH Falscheider Str.9 D 32584 Löhne Tel. 0 57 32 / 89 17 20  
[www.q-tech.de](http://www.q-tech.de) e-mail: [info@q-tech.de](mailto:info@q-tech.de)

## Instructions for Halltest Part Nr. 130.277, 130.077, 130.137

1. Turn off the ignition
2. Disconnect the hall sensor
3. Connect the Halltest to the hall sensor and the factory harness and turn on the ignition.
4. Rotate the engine in running direction until the red LED lights up. This is the point of ignition.
5. Remove the Halltest and reconnect the hall sensor to the factory harness.