

Q-TECH Falscheider Str.9 D 32584 Löhne Tel. 0 57 32 / 89 17 20  
[www.q-tech.de](http://www.q-tech.de) e-mail: [info@q-tech.de](mailto:info@q-tech.de)


## Gebrauchsanleitung für Halltest Artikel Nr. 130.277, 130.077, 130.137

**Alle Arbeiten sind nach BMW Reparaturanleitung durchzuführen.**

**Wenn Sie unsicher sind, beauftragen Sie eine Fachwerkstatt mit dem Einbau !**

1. Zündung ausschalten
2. Hallgeber an der Steckverbindung trennen
3. Halltest in beide freien Stecker einstecken und Zündung einschalten
4. Motor in Drehrichtung drehen.  
Der Wechsel AN-AUS oder AUS-AN der roten Lampe zeigt den eingestellten statischen Zündzeitpunkt an, je nach Drehrichtung
  
5. Nach den Einstellarbeiten die Steckverbindung Hallgeber-Kabelbaum wiederherstellen.

the english manual can be found here: <https://q-tech-shop.de>

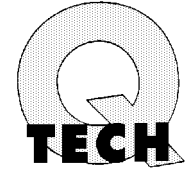

Q-TECH Falscheider Str.9 D 32584 Löhne Tel. 0 57 32 / 89 17 20  
[www.q-tech.de](http://www.q-tech.de) e-mail: [info@q-tech.de](mailto:info@q-tech.de)

## Instructions for Halltest Part Nr. 130.277, 130.077, 130.137

**All work must be carried out in accordance with the BMW repair instructions.  
If you are unsure, commission a specialist workshop to carry out the installation !**

1. Turn off the ignition
2. Disconnect the hall sensor
3. Connect the Halltest to the hall sensor and the factory harness and turn on the ignition.
4. Rotate the engine in running direction until the LED changes the colour. This is the point of ignition.
5. Remove the Halltest and reconnect the hall sensor to the factory harness.